


**BUILT
AUSSIE
TUFF**

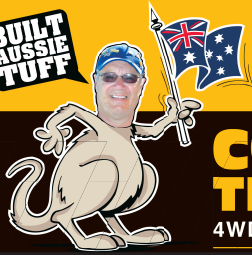

**COUPLEMATE
TRAILER PARTS**
4WD, TRAILER, CAMPER AND CARAVAN PARTS



EASY JACK

SAFETY INSTRUCTIONS



- The vehicle and trailer **MUST REMAIN ATTACHED** at the trailer coupling with safety chains attached during use of the EASY JACK.



- The vehicle and trailer **MUST BE ON FIRM LEVEL GROUND** during the installation and operation of the EASY JACK.



- With the trailer attached to the vehicle at the coupling and with the trailer and vehicle on firm level ground, place the easy jack under the axle of the trailer as **CLOSE AS POSSIBLE**, but **WITHOUT THE POSSIBILITY OF FOULING** on the brake assembly or springs of the trailer under normal operation, to the end of the axle which requires lifting.

- Ensure that the EASY JACK is **SQUARE** with and placed **PERPENDICULAR** to (at 90 degrees) the axle. The axle must fit into the crescent receiver of the EASY JACK, **DO NOT** use the EASY JACK if the axle **DOES NOT** fit into the receiver.



- **DO NOT** place fingers or hands between the EASY JACK mounting surface and the trailer axle before or during operation. **DO NOT** place fingers or hands between the foot of the EASY JACK and the ground before or during operation of the EASY JACK.

- Once EASY JACK is correctly in place, ensure all persons within the area are clear of the trailer and vehicle, with one person acting as an observer but **REMAINING CLEAR OF THE TRAILER AT ALL TIMES**.

- Put the vehicle into drive or a low forward gear (if manual transmission) and drive the vehicle forward slowly until the easy jack rolls over onto the horizontal load surface (the horizontal section of the device).

- Once the axle end has been lifted from the ground and the EASY JACK is resting on the horizontal load surface, leave the engine in gear and apply the park brake ensuring the vehicle does not move / surge forward.

- With the trailer axle lifted from the ground and the trailer attached to the vehicle via the tow coupling and safety chain, work can begin on the raised wheel.




- **DURING OPERATION OF THE EASY JACK DO NOT PLACE ANY BODY PART UNDER THE TRAILER, DO NOT LEAN OR PUSH ON TRAILER, DO NOT UNHITCH OR UNHOOK TRAILER FROM VEHICLE.**

- Ensure that all persons in the vicinity remain clear of the trailer and vehicle and that the wheel of the vehicle which has been raised is now properly fitted in accordance with the manufacturer's specifications.

- With the work completed, return to the vehicle and **ENGAGE THE IGNITION AFTER PLACING FOOT ON THE BRAKE PEDAL**. If vehicle is in gear depress clutch pedal or similar system to prevent vehicle from surging forward during ignition.



- While an observer guides the driver, slowly reverse the vehicle and trailer until the EASY JACK is rolled back and no longer under any load from the trailer, **DURING OPERATION ENSURE ALL PERSONS STAND CLEAR OF THE TRAILER AND VEHICLE, ENSURE NO PERSON OR PART THEREOF IS UNDER THE TRAILER AT ANY TIME.**

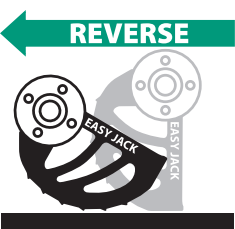

- It is recommended that the wheels of the caravan/trailer be **CHOCKED**.

- No person should remain in a caravan/trailer supported by a jack.

- The EASY JACK is **ONLY** to be used in accordance with the instruction sheet provided.

- Refer to www.couplemate.com.au for further information regarding this product.